

Safety Warnings:

WARNING! Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

WARNING! This product in upright position is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

WARNING! This product is suitable from birth in reclined position only.

WARNING! This product does not replace a cot or cot bed. Should your child need to sleep, then it should be placed in a suitable cot or cot bed.

WARNING! Follow the manufacturer's instructions.

WARNING! Never leave the child unattended.

WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING! Do not use the highchair unless all components are correctly fitted and adjusted.

WARNING! Be aware of the risk of open and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair.

WARNING! Always keep child in view while in the highchair.

WARNING! The harness must always be used and correctly fitted. Most injuries from highchairs are caused by falls.

WARNING! Falling hazard: Prevent your child from climbing on the product.

WARNING! Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.

WARNING! Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

WARNING! This product in upright position is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

WARNING! This product is suitable from birth in reclined position only.

WARNING! This product does not replace a cot or cot bed. Should your child need to sleep, then it should be placed in a suitable cot or cot bed.

WARNING: Your child's safety is your responsibility.

WARNING: Do not leave the child unattended.

WARNING: Do not use the high chair unless all components are correctly fitted and adjusted.

WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair. Never place the highchair near these items.

its feet against a table or any other structure.

Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.

Never carry the high chair when the child is in it. Please lift your child in and out of the highchair. Do not allow children to stand on the footrest (where provided) and seat or to climb in and out of the high chair.

Only use the high chair on a level floor surface. Never add accessories or fittings that have not been approved by the manufacturer.

Manufactured by: The Red Kite Baby Co Ltd. 35 Lavenham Road Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK.

Authorised Representative:

Mum n Me, Triq is-Suq, Zejtun, ZTN1420. Malta.

red kite

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Feed Me Lolo




This product in upright position is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

Tested to BS EN 14988:2017+A2:2024
and the relevant parts of BS EN 12790-1:2023
Customer Care: www.redkitebaby.co.uk

Assembly Instructions


Parts List

1. Seat and upper frame assembly
2. Feeding tray with inset
3. Armrests x 2
4. Front legs (with stoppers)
5. Rear legs (with wheels)
6. Leg rest
7. Footrest

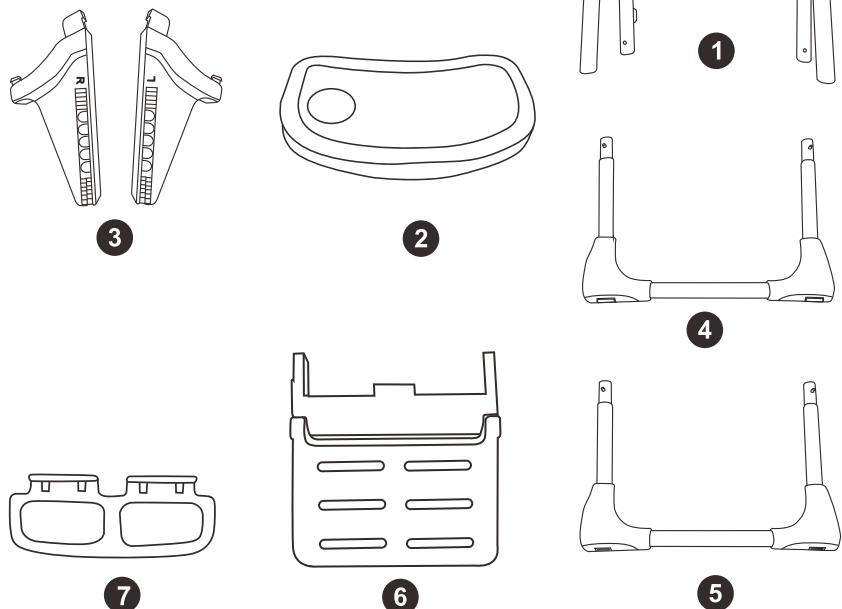


1. To assemble the legs

Connect the legs to the upper frame assembly by slotting them together, ensuring the push pins have come through holes. Note. Pay particular attention that the legs that have the wheels on the bottom are connected to the rear upper frame.

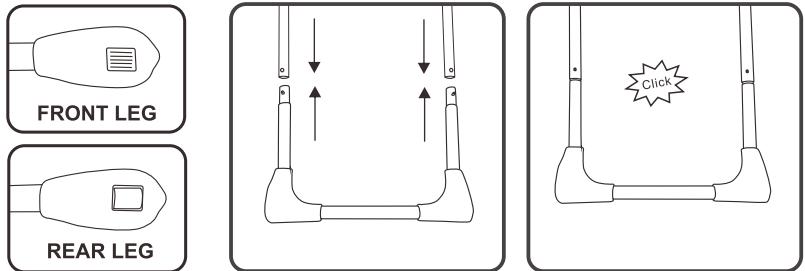


2. To unfold the highchair

Press both of the buttons on each side and with your foot on the rear legs, pull backwards until the frame locks in place. **WARNING!** When unfolding the highchair always check to ensure legs are fully open and the lock is engaged before use.

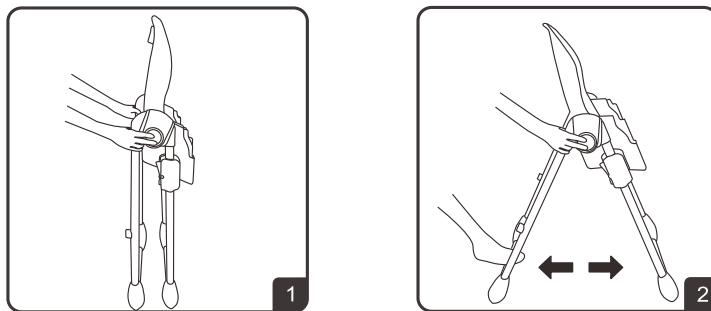





3. To attach the armrest

Attach the armrests to the main seat frame by sliding them in a downwards motion until they click in place.

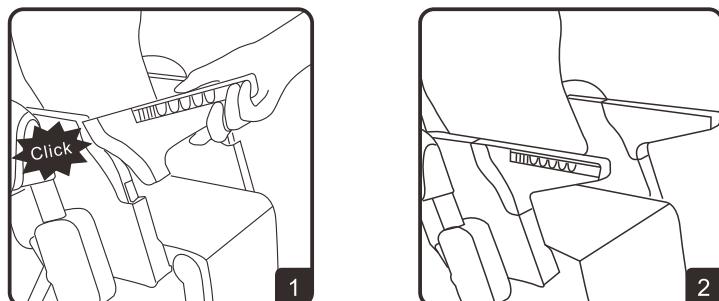




4.Tray adjustment

Slide the catches under the tray outwards and slot the armrest into the grooves in the tray. You can select three different tray positions by releasing the catches and adjusting the tray as necessary. The inset tray clips on and off by releasing the clips on the sides.

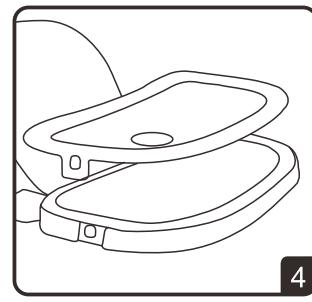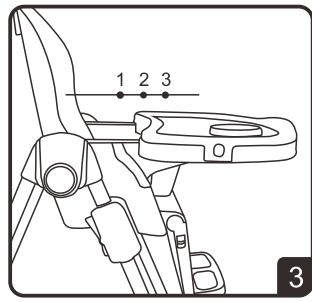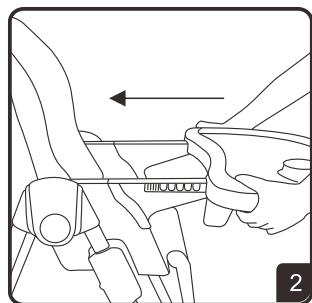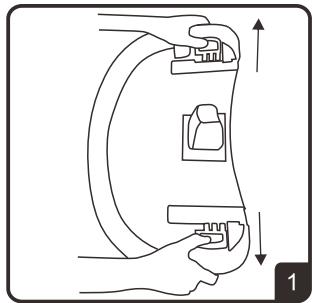



5.To attach the leg rest and foot rest

Insert the ends of the leg rest into the corresponding holes at the front of the seat and push in firmly. Attach the foot rest into the leg rest in one of the two available positions and push down firmly.

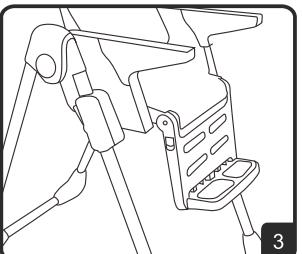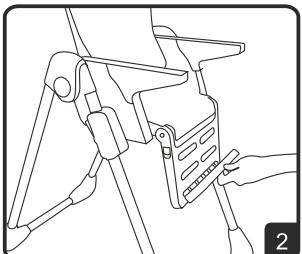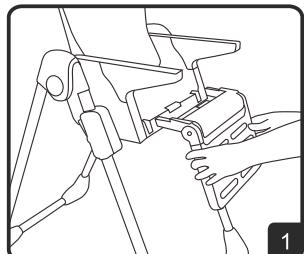



6.Height adjustment

Squeeze the triggers on the height adjustment mechanism and raise or lower the seat to the desired position. **WARNING!** Do not adjust the seat height when the child is in the highchair.

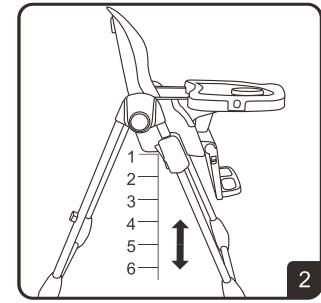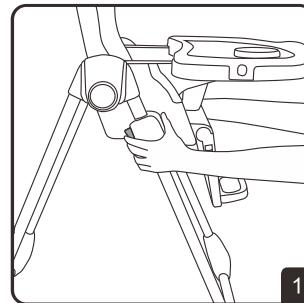



7.Back rest adjustment

Press the button at the back of the backrest, 3 positions can be adjusted.

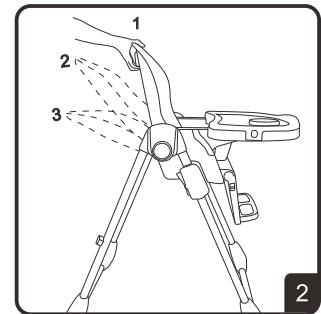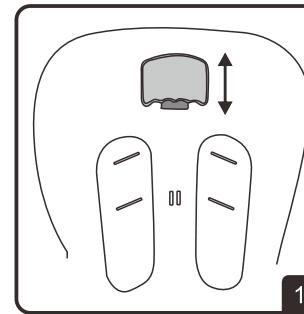


8. Leg rest adjustment

Pull down the catches on each side of the leg rest and select the desired position.

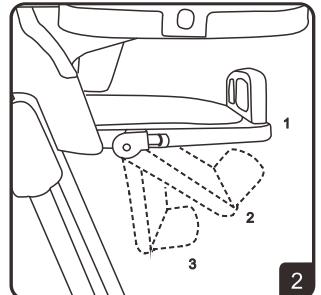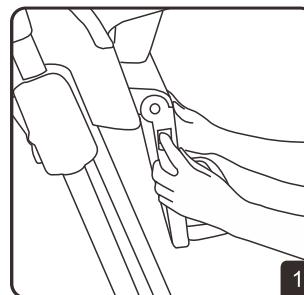

9. To fold the highchair


Press both of the buttons on each side and with your foot on the rear legs, push forward until the frame closes. You can remove the tray and place it on the pegs at the back of the chair for storage purposes.

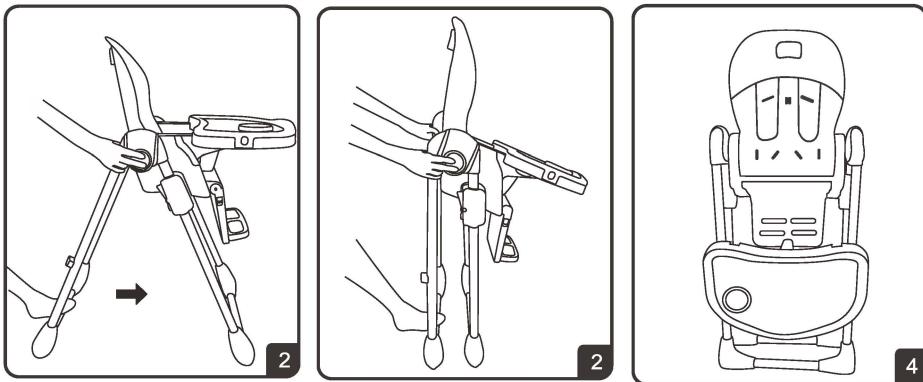

10. To secure and adjust the harness

To release the harness, press the central button A and push them together to connect the harness until it clicks in place. Use the sliders on the harness straps to achieve a secure and snug fit.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

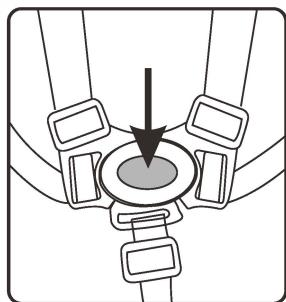

General care:

The correct use and maintenance of this high chair is essential.

Always ensure the high chair is stored in a dry place to prevent mould or mildew developing. Avoid leaving your high chair in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

Cleaning:

Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth.

Clean the harness with a mild soap and water solution. Rinse and wipe dry.

Clean plastic parts with a mild soap and water solution. Rinse and wipe dry.

Do not use abrasive cleaners or bleach.

The tray is not dishwasher safe.

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found. Inspect all studs, nuts and screws for tightness.

Check that all straps and harness attachment points are in good working order.

Do not use replacement parts other than those approved by the manufacturer or distributor.

Failure to do this may invalidate your warranty.

Tested to BS EN14988:2017+A2:2024 and the relevant parts of BS EN 12790 : 2009

red kite