

red kite


IMPORTANT KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep them for future reference.

Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Feed Me Snak

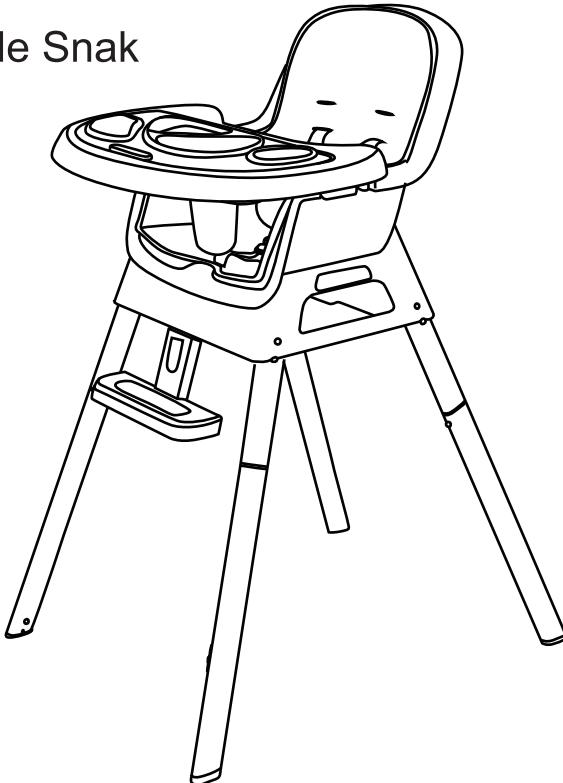


Highchair mode: Complies with BS EN 14988:2017+A1:2020. This product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg.

Booster mode: Complies with BS EN 16120 + A2 : 2012 : 2016. This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg.

Chair mode: Complies with: BS EN 17191:2021. This product is intended for children from 1 - 3 years of age.

Name of Parts


Check all parts are present before assembly.

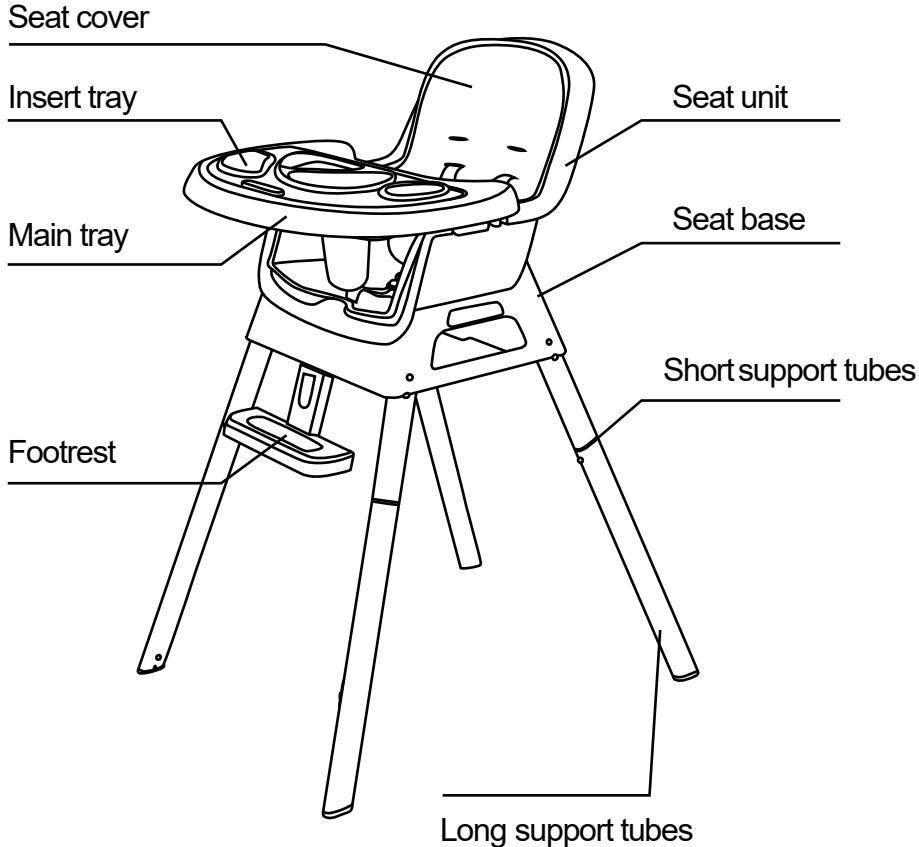

Name	Support tubes(long)	Support tubes(short)	Tray	Footrest	Seat
Qty	4	4	2	1	1

ASSEMBLY INSTRUCTIONS

Assemble the Support Tubes

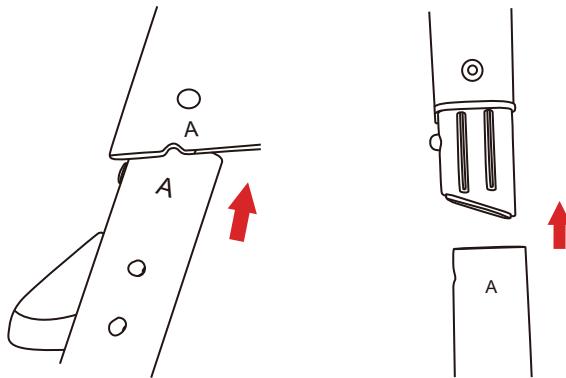

Please note the letters on the seat base and the support tubes.

Letter "A" : 2 short support tubes + 2 long support tubes




Letter "B" : 2 short support tubes + 2 long support tubes

Match the support tubes "A" to the seat base "A", same for "B" combination.

You should hear a "click" and the pin will come out from the hole on the support tubes.

Press the pin inward and pull the support tube out to disassemble.

Assembling the Footrest

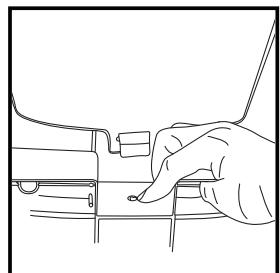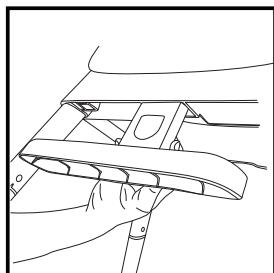
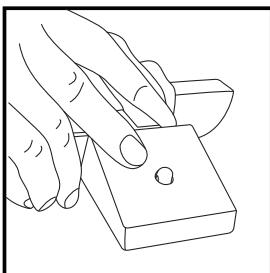


Insert the footrest into the seat base, you should hear a “click”.

Pull the footrest to make sure it is assembled in position.











Press the pin behind the footrest and pull it out to disassemble.

Adjust the Tray Positions

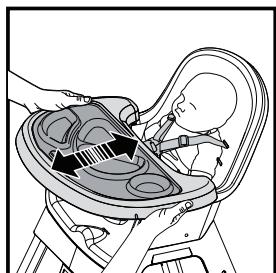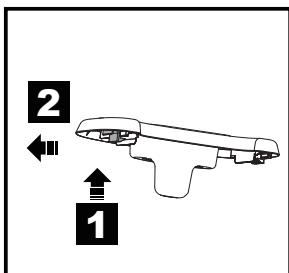

Squeeze the two handles under the main tray at the same time to unlock and adjust the main tray in your desired positions. There are 3 positions to choose from.

Harness & Buckle Instructions

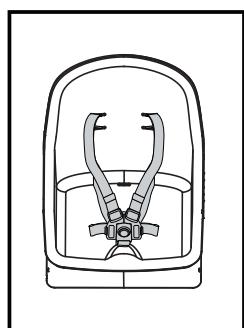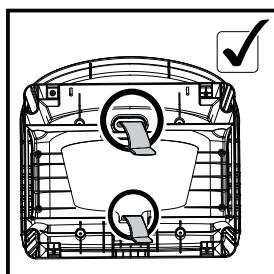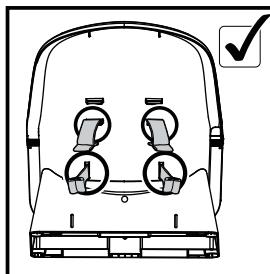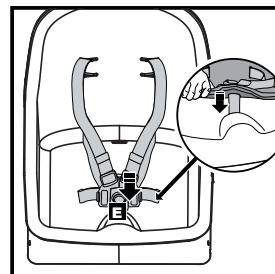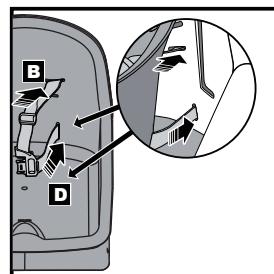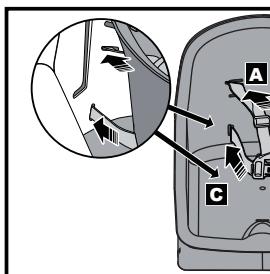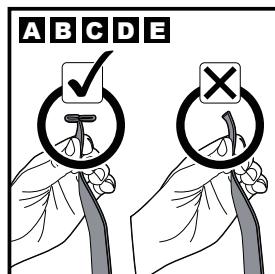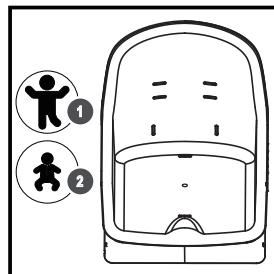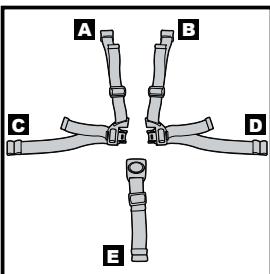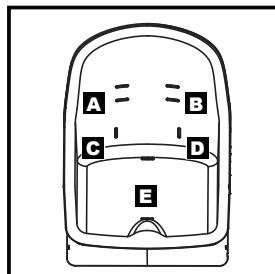

Note: Thread the shoulder straps through the loops to reduce the shoulder strap height if required.


To fasten the waist harness: Insert both buckle clips into each side of the buckle until a "Click!" is heard.

To release the harness: Squeeze the buckles and pull apart.

To adjust the buckle: Adjust the shoulder straps by moving the sliders.


IMPORTANT! Always use the restraint system.

Highchair Mode

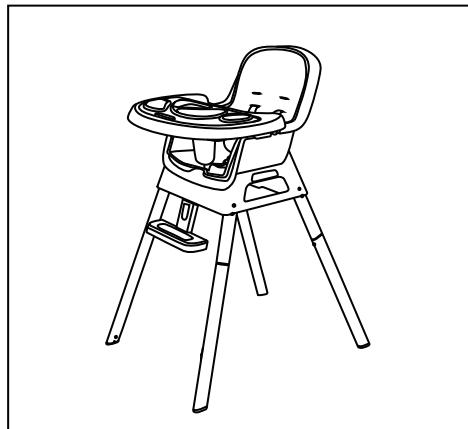


Lo Chair Mode

Remove the long support tubes and change it to Lo chair Mode.

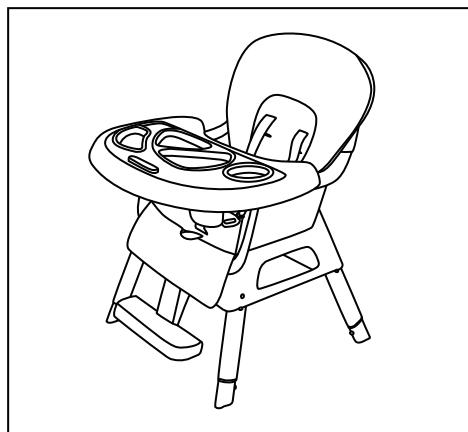

Toddler Chair Mode

Remove the main tray and change it to toddler chair mode.







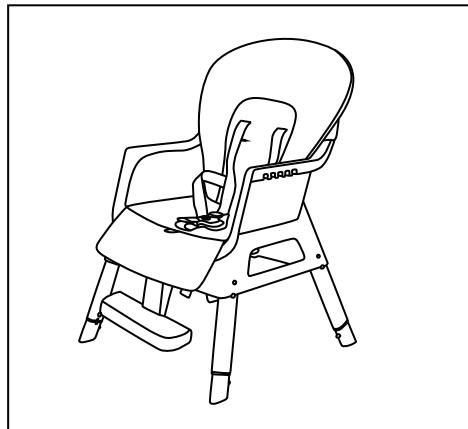


Booster Seat Mode



Remove the support tubes and change it to Booster Seat Mode. Fix the Booster Seat on the chair tightly with the belts under and behind the seat.

WARNING! The two belts must be fastened tightly during use. Please fasten the belt with the loop when not in use.

WARNING! Use only a full size adult chair with a back. Never use the booster seat on an unstable chair or on a stool or on a bench.

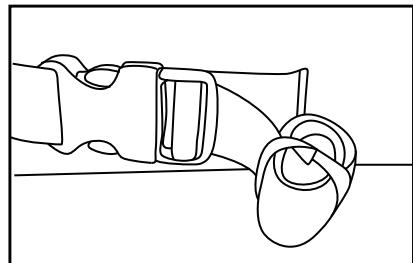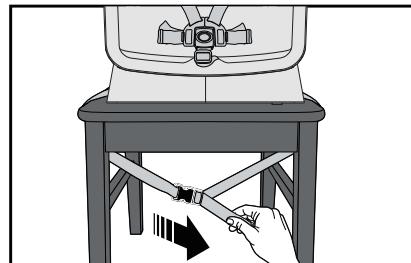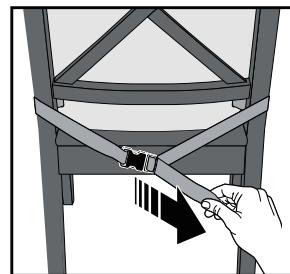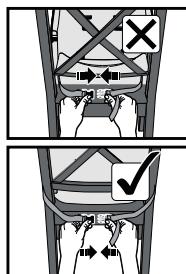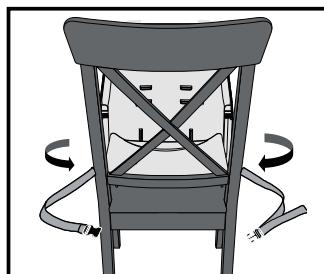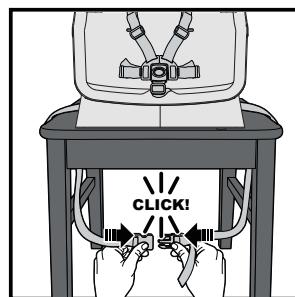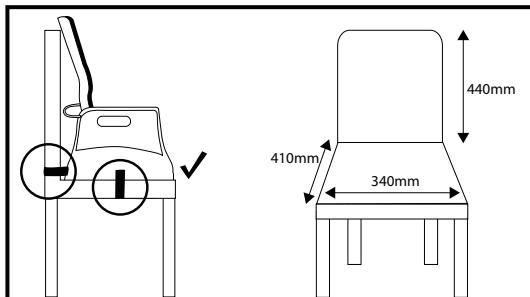

Use of the Insert Tray

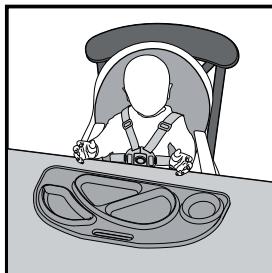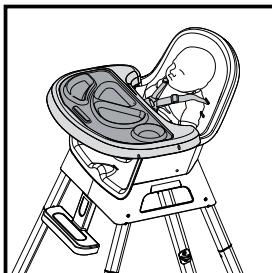

The insert tray can be used with the main tray or on its own when at a table .

General care

The correct use and maintenance of this product is essential. Always ensure the product is stored in a dry place to prevent mould or mildew developing. Avoid leaving your product in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

Cleaning

Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth. Clean the harness with a mild soap and water solution. Rinse and wipe dry. Clean plastic parts with a mild soap and water solution. Rinse and wipe dry. The seat pad is surface washable only. Do not submerge in water. Do not use abrasive cleaners or bleach. The tray is not dishwasher safe.

High / Lo Chair Mode

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found.

Inspect all studs, nuts and screws for tightness. Check that all straps and harness attachment points are in good working order.

Do not use replacement parts other than those approved by the manufacturer or distributor.

Failure to do this may invalidate your warranty.

Safety Warnings:

WARNING: Your child's safety is your responsibility.

WARNING: Do not leave the child unattended.

WARNING: Do not use the high chair unless all components are correctly fitted and adjusted.

WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair. Never place the highchair near these items.

WARNING: DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.

WARNING: DO NOT place this product near a window where cords from blinds or curtains could strangle a child.

Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

Falling hazard: Prevent your child from climbing on the product.

Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

Keep children away when unfolding and folding the product to avoid injury.

Do not use for a child weighing more than 15 kgs.

Only suitable for children who can sit unaided.

Always use the 5 point harness provided. Ensure that it is correctly fitted and adjusted before each use.

Adult assembly required. Always ensure that the high chair has been correctly assembled and that all locking devices have engaged before placing your child in the high chair.

Ensure that all parts of your child's body are clear of the high chair when assembling, folding or making adjustments.

Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.

Never carry the high chair when the child is in it.

Please lift your child in and out of the highchair. Do not allow children to stand on the footrest (where provided) and seat or to climb in and out of the high chair.

Only use the high chair on a level floor surface.

Never add accessories or fittings that have not been approved by the manufacturer.

Complies with BS EN 14988:2017+A1:2020

Booster Mode

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the booster seat immediately if any are found.

Check that all straps and harness attachment points are in good working order.

Always use the restraint system and the chair attachment system

Always check the security and the stability of the chair mounted seat before use (when in Booster Seat mode).

Do not use replacement parts other than those approved by the manufacturer or distributor.

Failure to do this may invalidate your warranty.

Safety Warnings:

WARNING: Your child's safety is your responsibility.

WARNING: Never leave the child unattended.

Do not use until your baby can support their own head.

Prevent falls, Never use on any uneven or elevated surfaces e.g. tables or counter tops.

Do not place or position the seat near any item which could present a danger of suffocation, strangulation, e.g. strings, blind/curtain cords, etc or falling objects.

Do not place the seat near strong heat sources or in direct strong sunlight.

Do not use in water or as a bath seat.

Prevent serious injury or death. Do not use in a motor vehicle.

Always use the restraint system and ensure it is correctly fitted.

Do not use this product on stools or benches.

This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg.

Ensure that the adult chair with the chair mounted seat is placed in a position where the child is not able to use its feet to push against the table or any other structure as this can cause the tip over of the adult chair supporting the booster seat.

Never carry the booster seat when the child is in it.

Always check the security and the stability of the product on the adult chair before use.

Always use the chair attachment system and ensure it is correctly fitted before use.

Complies with BS EN 16120 : 2012 +A2 : 2016

Toddler Chair Mode

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the booster seat immediately if any are found.

Check that all straps and harness attachment points are in good working order.

Always use the restraint system and the chair attachment system

Always check the security and the stability of the chair mounted seat before use (when in Booster Seat mode).

Do not use replacement parts other than those approved by the manufacturer or distributor.

Failure to do this may invalidate your warranty.

Safety Warnings:

The Toddler Chair Mode is not suitable for the baby below 3 years old.

DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.

Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

DO NOT place this product near a window where cords from blinds or curtains could strangle a child.

Complies with: BS EN 17191:2021.

For all technical queries please call: 01454 326 568

Imported by: The Red Kite Baby Co Ltd. 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK.

red kite