

red kite

Stroller mode:

- **WARNING** Use a harness as soon as your child can sit unaided.
- **WARNING** This seat is not suitable for children under 6 months.
- **WARNING** Always use the restraint system.

Car seat mode:

- This vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

Travel System Information:

- This product is supplied with one raincover which fits in stroller mode, carry cot mode and car seat mode. Take extra care in windy conditions when using the raincover.
- We recommend allowing the raincover to dry before folding and storing in the basket to prevent mould and mildew forming.
- A raincover is not supplied for the car seat.
- Padded liners are supplied with the seat unit and car seat. These can be removed by threading the harness through the slots in the liner.
- The fixed wheel function makes using the stroller on uneven terrain easier. However, the stroller must never be used on sand as this will severely damage the bearings in the wheels.
- The height of the shoulder straps can be adjusted by feeding the harness through the cut out holes located on the seat unit.
- Not intended for children weighing more than 22kgs.
- This stroller is designed for one child only.
- The brake must always be engaged when placing and removing children from the stroller.
- Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.
- Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.
- Do not use accessories that have not been approved by the manufacturer.
- Never use the stroller to carry a child up and down stairs or escalators.

Before folding the stroller check the following:

- A Your child is clear of moving parts
- B The rear brakes have been applied
- C The front wheels are secured in the locked mode
- D The seat unit or car seat has been removed
- E All items have been removed from the basket
- F Never attempt to close or fold the stroller with the child inside


Manufactured by: The Red Kite Baby Co Ltd, 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK.

Authorised Representative: Mum n Me. Triq is-Suq, Zejtun, ZTN1420, Malta.

IMPORTANT READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Instruction leaflet

Push Me Savanna i Travel System

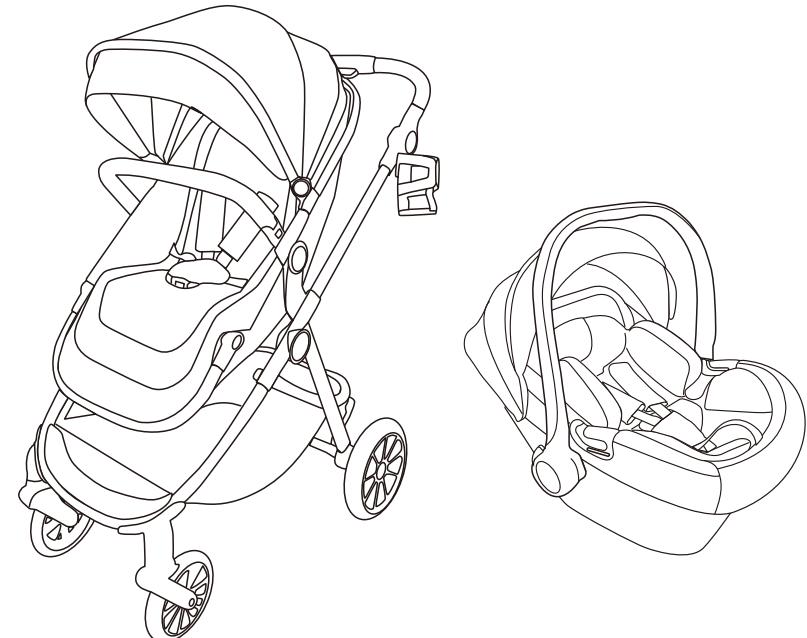

Stroller: EN1888-2:2018.


Carry Cot Mode: This product is suitable for a child who cannot sit up unaided, roll over and cannot push itself up (up to 9kg) on its hands and knees. Maximum weight of the child: 9kg.

Stroller Mode: Intended for children from 6 months up to 22kg or 4 years whichever comes first.

Rear Facing Infant Carrier: R129 Universal.
For infants up to 13kg. Category: 4O – 85 cm.


Customer Care: www.redkitebaby.co.uk

Parts

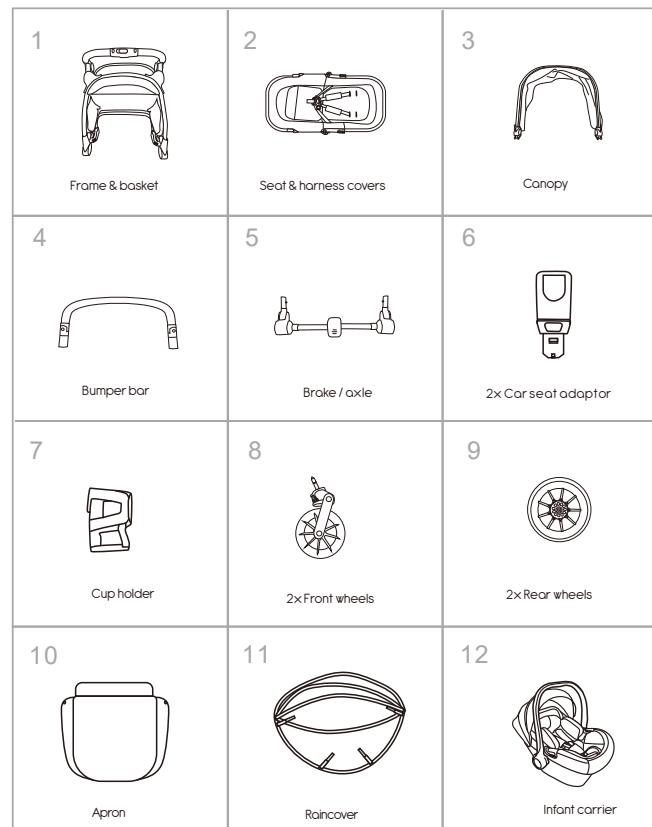


Carry cot mode

Birth - 9kg

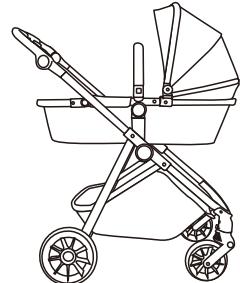


Stroller mode

6 months - 22kg

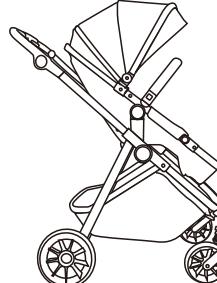

Car seat mode

Birth - 13kg

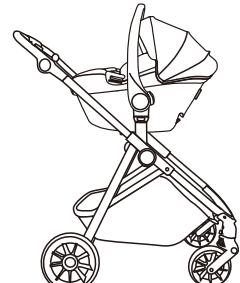

Assembly

Step 1 - Frame assembly

Release the storage latch and then lift the handle. Lift the handle bar and unfold the front and rear wheel supports outward until you hear a "click" sound.

WARNING Ensure that all the locking devices are engaged before use.

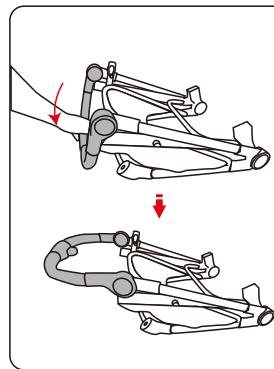


Fig.1

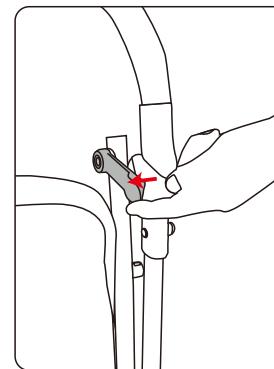


Fig.2

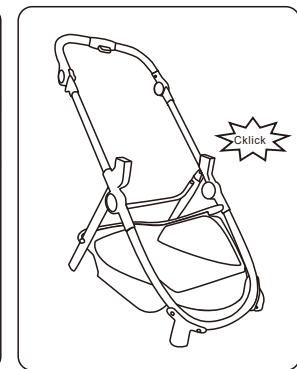


Fig.3

Step 2 - Wheel assembly

Front Wheel Assembly - Align the shaft on the wheel with the hole in the front leg and push in. Listen for a 'click'.

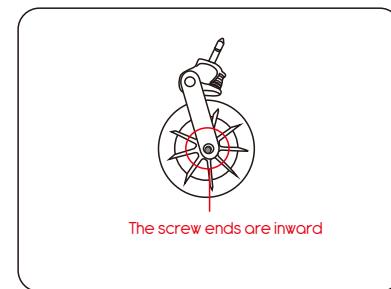


Fig.1

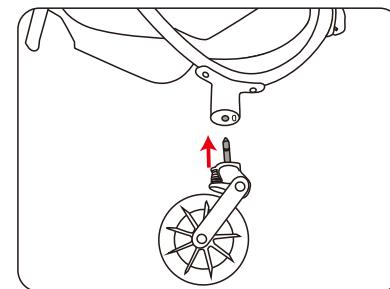


Fig.2

Rear wheel brake assembly: Align the rear wheel seat with the rear leg tube hole and insert it until the pin pops out.

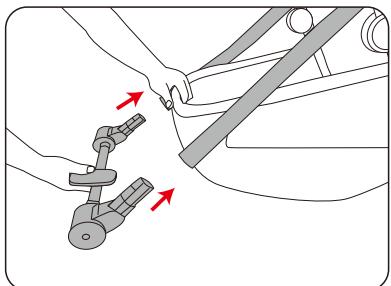


Fig.3

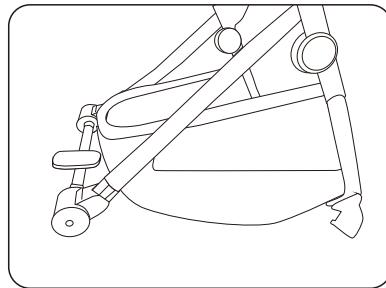


Fig.4

Rear Wheel Assembly – push each wheel pin into the sides of the brake bar until you hear a "click". Give them a tug to ensure they are attached securely.

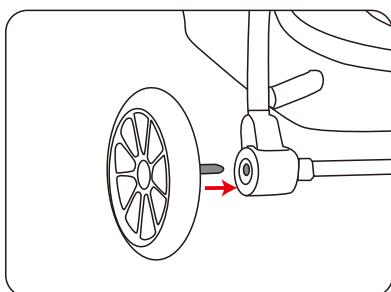


Fig.5

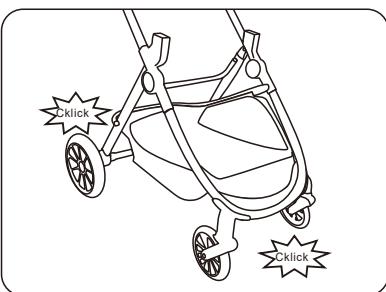


Fig.6

Step 3 – Seat assembly

Align the seat with the frame and push downwards, listening for a 'click' to lock in place.

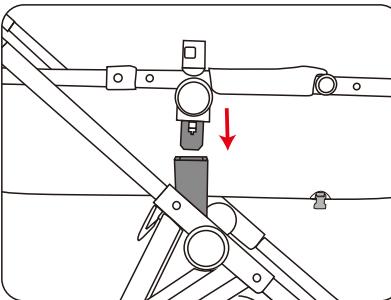


Fig.1

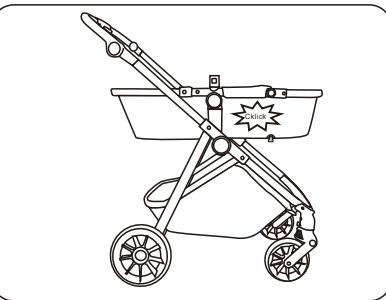


Fig.2

Step 4- Canopy assembly

Align the two canopy plastic slides with the two brackets and simultaneously push forwards as shown.

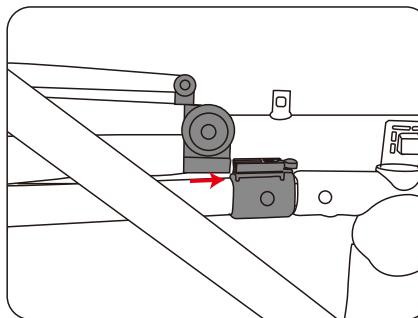


Fig.1



Fig.2

Step 5- Attaching the bumper bar

Align bumper bar shaft with the hole in the frame and push in. Listen for the 'click', then repeat on the other side.

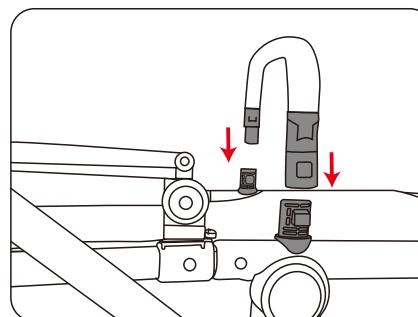


Fig.1



Fig.2

Operating instructions

1. Operating front swivel lock

To lock, push the swivel locks outwards. To unlock, push the swivel locks inwards.

To remove the wheels, press the release button in.

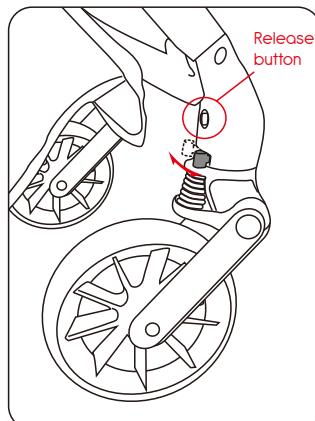


Fig.1

2. Operating the brakes

To apply the brake, press down firmly on the brake lever. To release the brake, press the brake lever upwards.

To remove the wheels, press the release button in.

WARNING Engage the brakes when placing and removing children in the product.

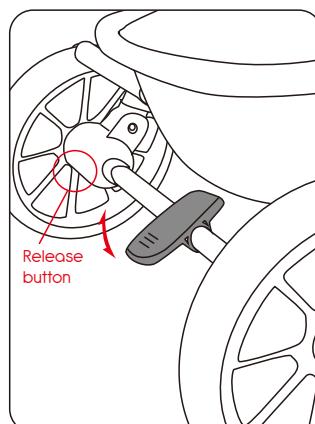


Fig.1

3. Adjusting the handlebar

Press the buttons on both sides of handlebar and adjust to the required position.

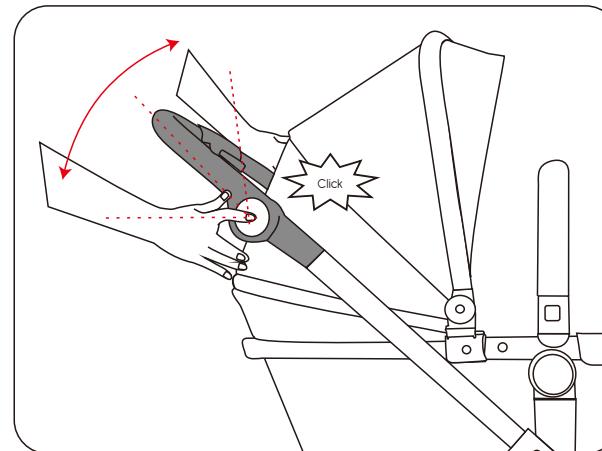


Fig.1

4. Converting from carry cot mode to seat mode

Clip together the strap under the seat to create the leg support [A]. To adjust the seat angle, press the large buttons in and swivel the seat to the required position.


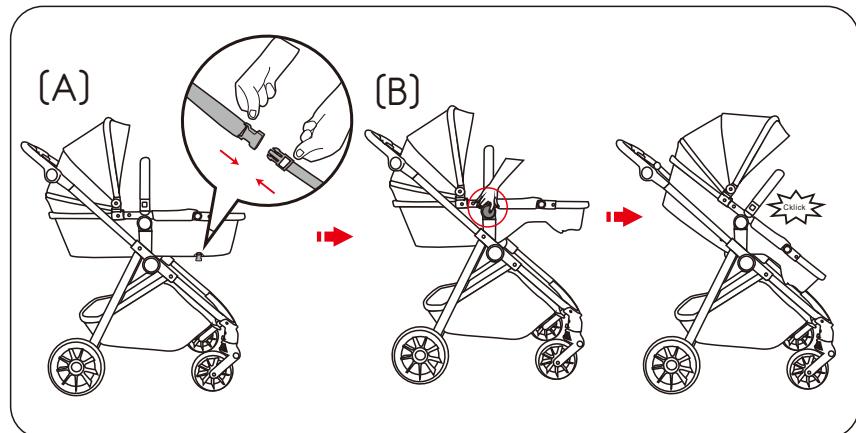


Fig.1


NOTE 1: It is recommended that when in carry cot mode for newborns that the harness is removed.

Method: Pull the buckles out through the buckle holes on the bottom of the carry cot.

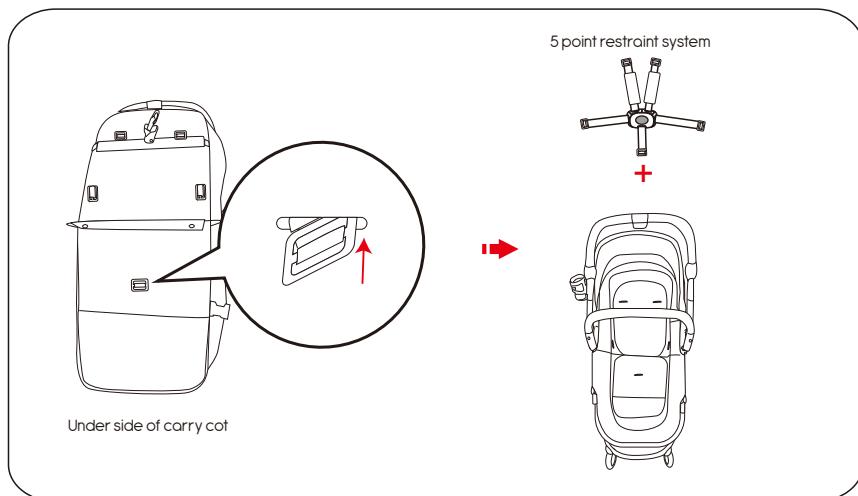

NOTE 2: When in the stroller mode, please install the 5 point restraint system

Method: Thread the buckles through the buckle holes at the bottom of the seat.

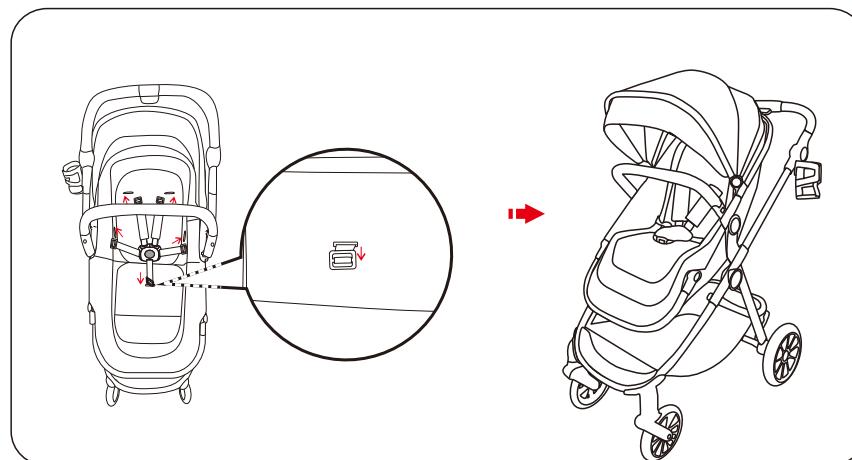

5. Adjusting seat back position

Squeeze adjuster clip and pull in a upwards or downwards motion to adjust backrest position.

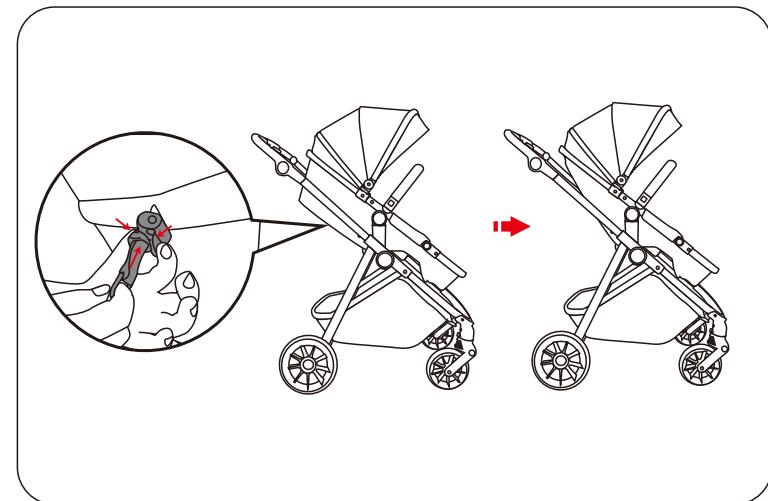


Fig.1

6. Adjusting canopy

To use the canopy, pull the front edge forward to open. There is a viewing window for parents to watch baby. Four positions are available.

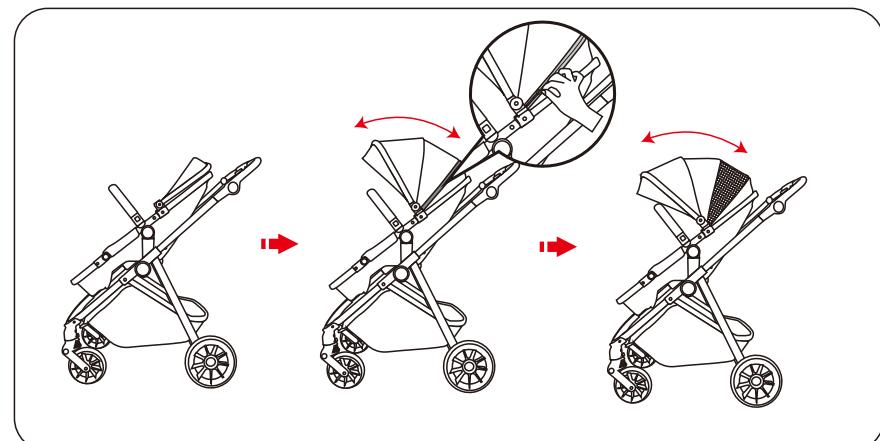


Fig.1

7. Adjusting the footrest

Press the buttons on both sides of footrest, to adjust the position.

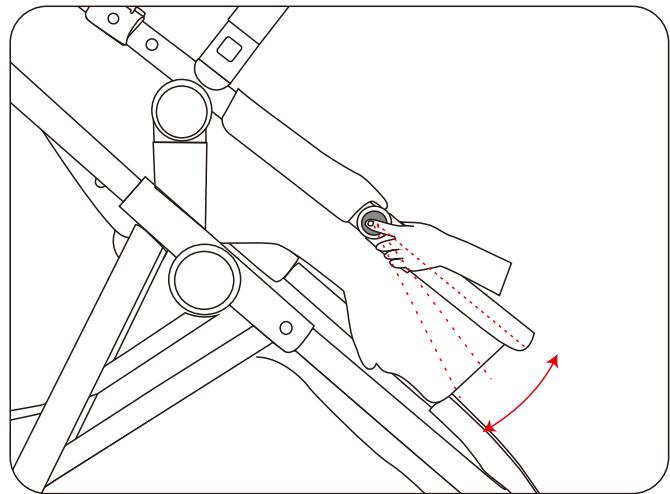


Fig.1

8. To attach the cup holder

Attach the cup holder to the frame of the stroller.

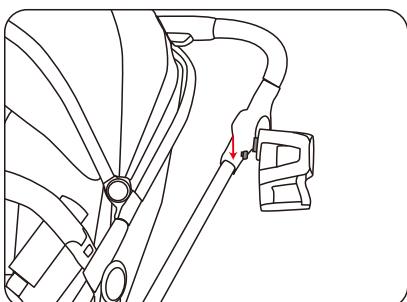


Fig.1

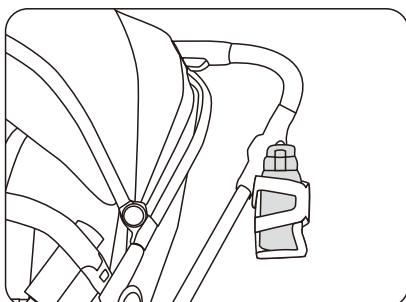


Fig.2

9. Securing your child

Attach each of the 4 harness straps into the central buckle. To tighten or loosen the waist and/or shoulder straps, hold and lift the plastic adjuster. Adjust straps to desired position. The waist strap needs to fit firmly around the child.

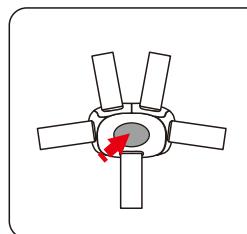


Fig.1

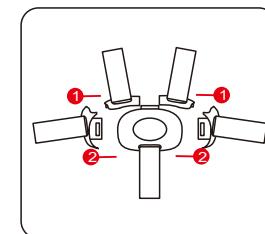


Fig.2

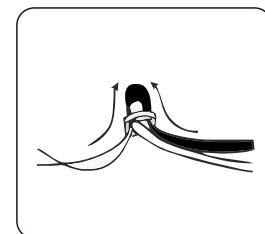


Fig.3

WARNING Always use the crotch strap in combination with the waist belt.

10. Apron assembly

Fasten the snaps on both sides.

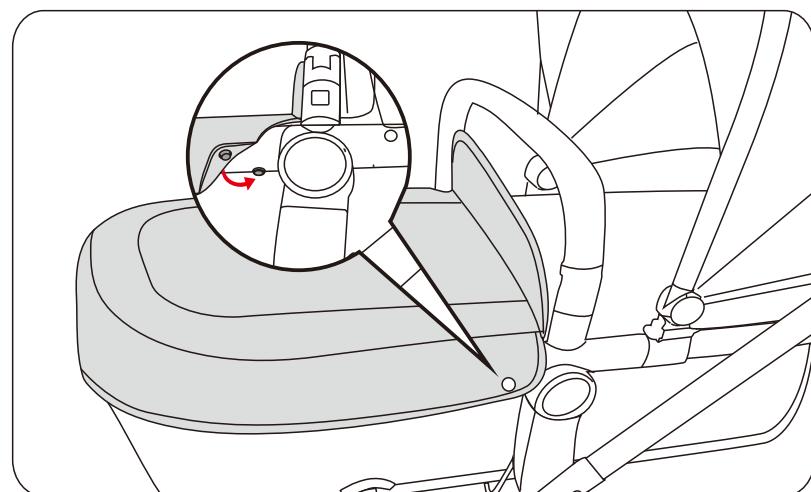


Fig.1

11. Raincover assembly

Put the rain cover over the seat and canopy and then fasten the Velcro straps together.


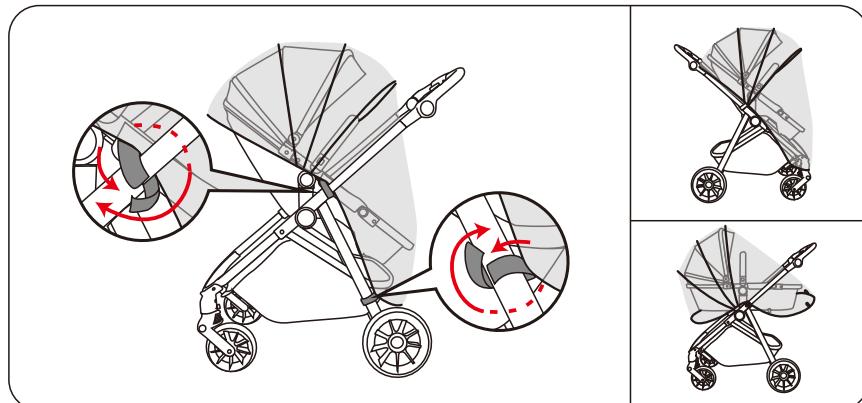


Fig.1


12. Folding the stroller

Remove the stroller seat by pressing the release buttons on both sides and lift up. Push the two buttons on the handlebar and then push down the handlebar to close the frame.

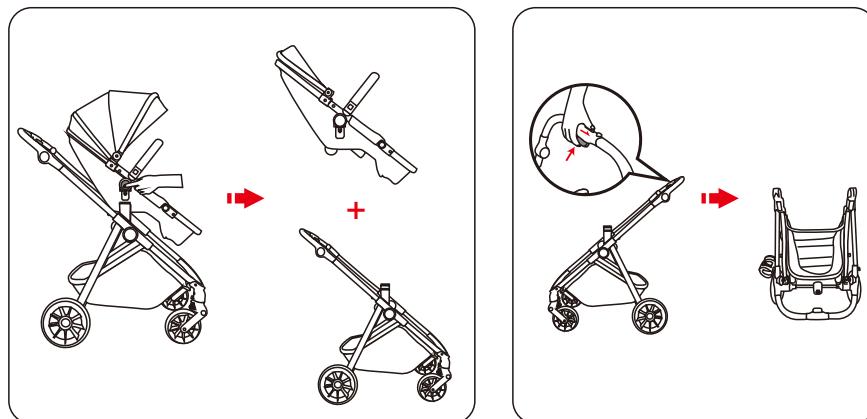


Reverse seat direction

Press the seat release buttons on both sides and lift the seat. Turn the stroller seat around and align with the frame and gently push down. Listen for 'click' to lock in place.

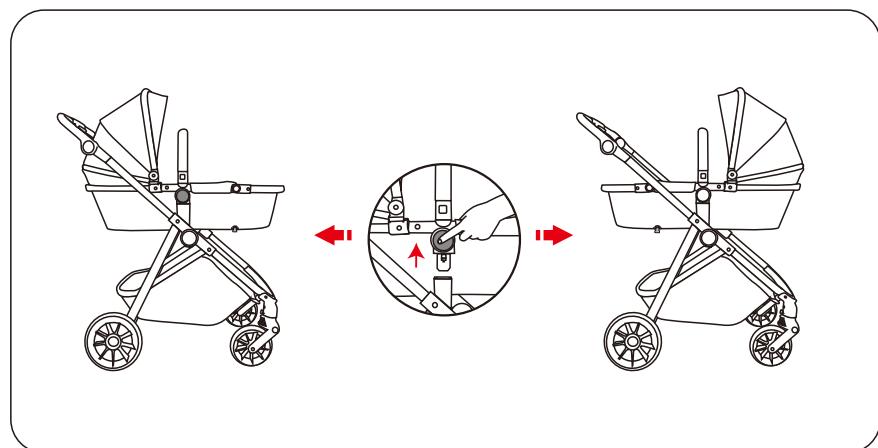

Reverse carry cot direction

Press the seat release buttons on both sides and lift the seat. Turn the stroller seat around and align with the frame and gently push down. Listen for 'click' to lock in place.

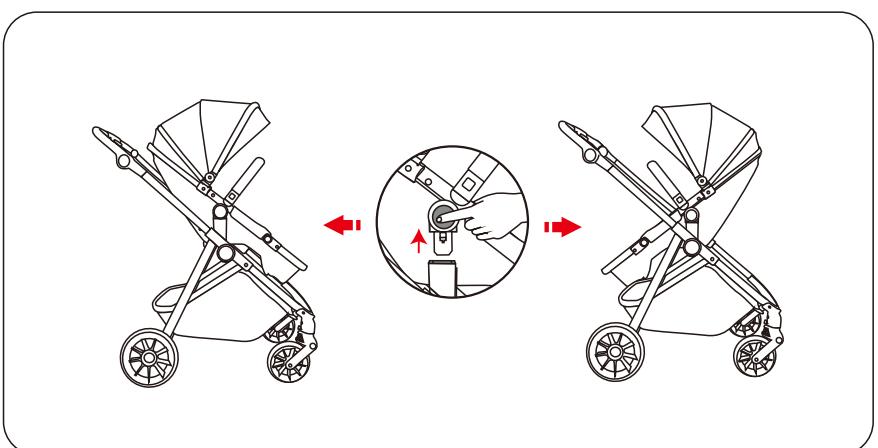

To attach the infant carrier for CAR SEAT MODE

Insert the adapters into the infant carrier joint. Align the adaptors and stroller frame the push down until a "click" is heard.

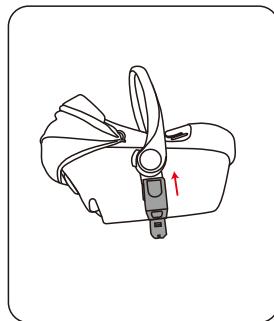


Fig.1


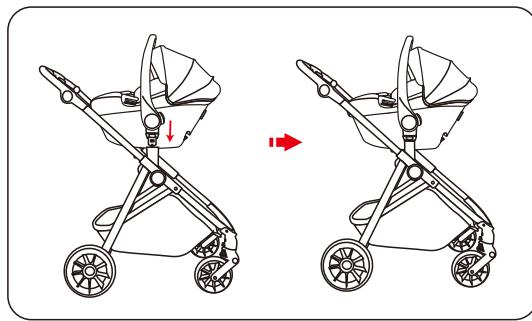


Fig.2

To release the infant carrier from the adaptors, press each of the release buttons and lift it upwards.

To release the adaptors from the stroller frame, press in the button on each adaptor and pull upwards.

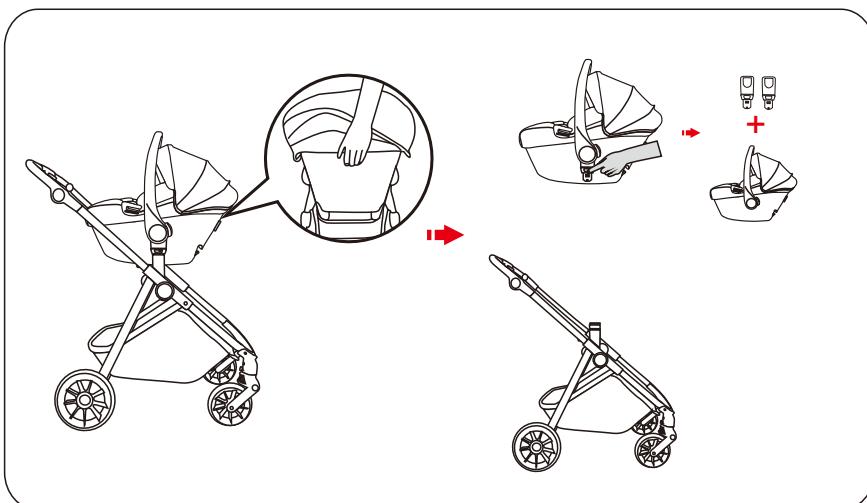

General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.
- Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided).

Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry. Metal parts may be cleaned with a damp cloth, wipe dry.
- Clean plastic parts with a mild soap and water solution, wipe dry.

Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

Safety warnings:

- WARNING Never leave the child unattended.
- WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.
- WARNING Do not let the child play with this product.
- WARNING Always use the restraint system.
- WARNING This product is not suitable for running or skating.
- WARNING Your child's safety is your responsibility.
- WARNING Any load attached to the handle affects the stability of the pram / pushchair.
- WARNING Check that the pram body or seat unit or car seat attachments are correctly engaged before use.

Carry Cot mode:

- WARNING: This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees.
- Maximum weight of the child: 9kg.
- WARNING! When in carry cot mode do not use an additional mattress.
- Whilst the product is in carry cot mode, the harness should be removed.
- Never use the detached seat unit (in carry cot mode) as a carry cot.
- Never change the seat unit into carry cot mode with your child in the seat unit.