


red kite

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


Your child may be hurt if you do not follow the instructions.

Adult assembly required.

Instruction Leaflet

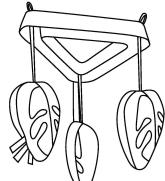

Sway Swing

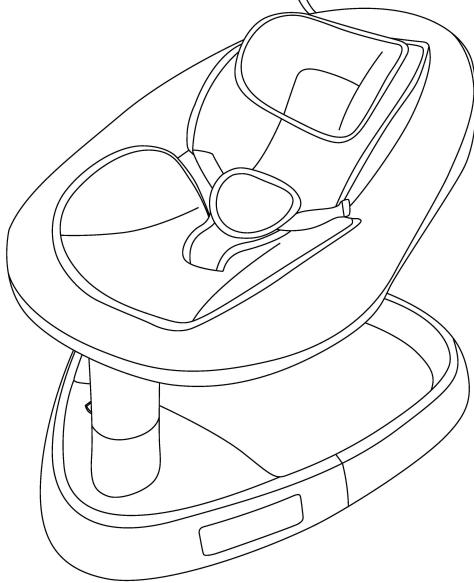


Suitable for babies from birth.

WARNING: Not recommended for children who can sit up by themselves (6 months approximately, until 9kg). Adult assembly required.

BS EN 12790 - 1: 2023. Customer Care: www.redkitebaby.co.uk


PARTS LIST

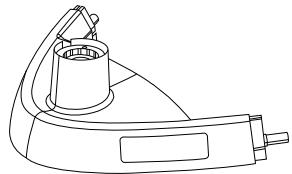


Swing Base x1




Backrest Tube x1

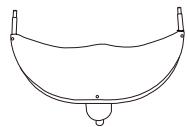


Bottom Tube x1

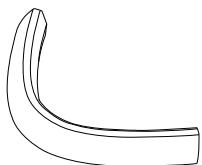


Right side base frame x1

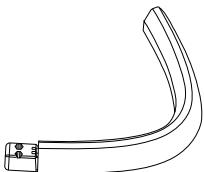

Left side base frame x1

 


Toy Mobile x1

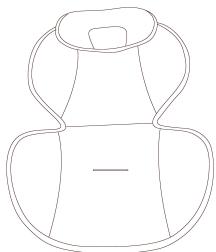

Seat Cover x1




USB Cable x1

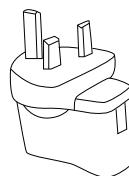

3 pin plug



ASSEMBLY INSTRUCTIONS

Base assembly

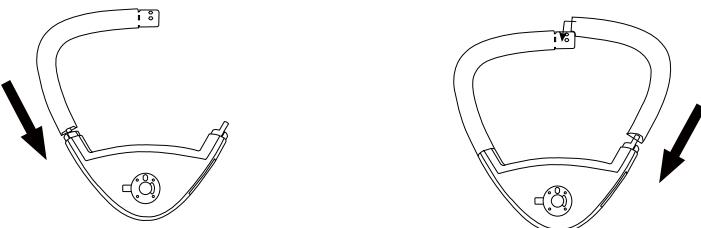


Backrest and cover assembly


Please ensure the seat strap is secured through the black plastic base

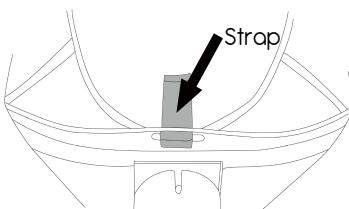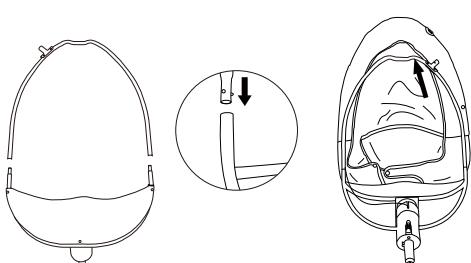



Press studs

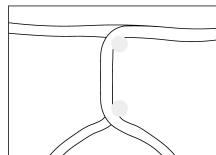



Completed assembly

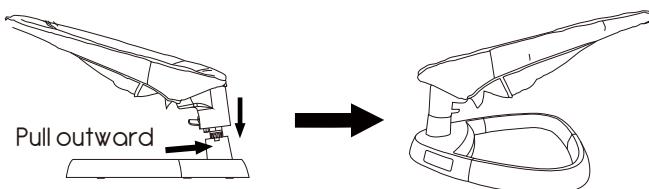


Toy mobile assembly

 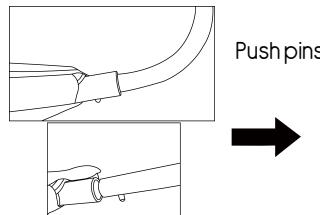

To secure and adjust the harness

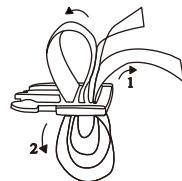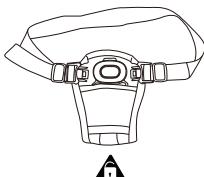


Swing lock

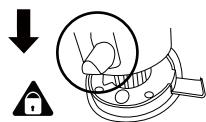

Push down to lock




Pull up to unlock

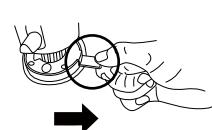

Remove Base

CONTROL PANEL FUNCTIONS

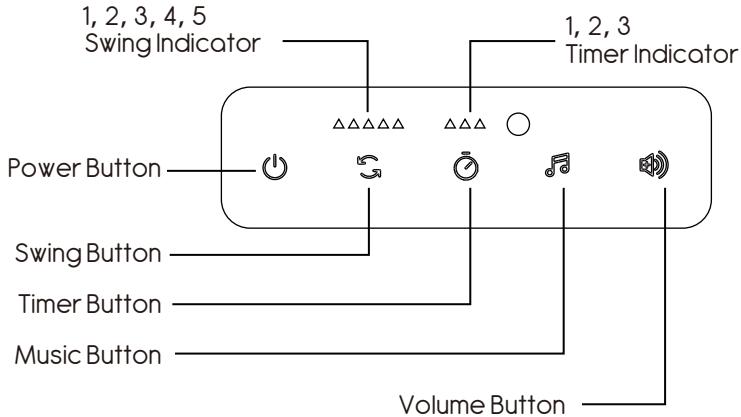

CONTROL PANEL

Power button

The power button indicator light will illuminate whenever the power cord is connected. Press the power button to switch on the unit and press it again to switch the unit off.

Timer button

Touch the timer button to select either 8, 15 or 30 minutes. Press it a 4th time to stop the timer.

Swing button

Touch the swing button to choose one of 5 different swing options. Touch the button again to stop it from swinging.

Music button

Touch the music button to start the music and press it again to pause the music. Once a tune is selected, press the button twice quickly to select a different tune.

Volume control

Press the button to cycle through the different sound levels.

POWER CORD

The swing is supplied with a UK 3 pin plug and a USB power cord.

BLUETOOTH

Open your device Bluetooth settings and search for Red Kite to connect it to the swing. The swing will chime when it's successfully connected.

Deselect the Bluetooth setting on your device to use the inbuilt tunes.

NOTE: The swing must remain within your device's Bluetooth® range for the connection to stay active.

General Care:

- The correct use and maintenance of this reclined cradle is essential.
- In some climates mould and mildew can affect the fabric on the reclined cradle.
- Always store the reclined cradle in a dry place.
- This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- Please dispose of packaging material as plastic bags can be dangerous to young children.

Cleaning:

- The cover may be sponge cleaned in situ using a mild detergent solution.
- For heavy soiling the cover may be machine washed on a 40 degree, gentle cycle.
- Lie cover flat and dry in a well ventilated area out of direct sunlight.
- Do not use bleach, ammonia based or abrasive cleaning chemicals.
- Do not dry clean.
- The frame and plastics may be cleaned with a damp cloth and a mild detergent solution and dried with a soft cloth.

Take extra care not to get the control panel or electrical parts wet.

Maintenance:

- Regularly inspect all tubes and fixings. Ensure that all are secure before each use of the product.
- Do not use the reclined cradle if any components are broken or missing.
- Regularly inspect fabric and stitching and check that it is undamaged.
- Do not use accessories or replacement parts other than those approved by the manufacturer. Failure to do this may invalidate your warranty.

Safety Warnings:

- **WARNING** Never leave the child unattended.
- **WARNING** Stop the product when the child starts trying to sit up.
- **WARNING** Never use this product on an elevated surface (e.g. a table).
- **WARNING** Always use the restraint system.
- **WARNING** Never use the toy bar to carry the product.
- **WARNING** Do not move or lift this product with the baby inside.
- **WARNING** When the product is connected to a music player, ensure that the volume of the music player is set to a low value.

Safety Information:

- Only use on a flat, level floor surface.
- Always ensure that the harness is fastened and adjusted at all times.
- Only use on a flat, level floor surface.
- Do not use near stairs / steps.
- Do not position the reclined cradle close to a source of heat e.g. household electric fires etc.
- Do not position close to items such as curtains and electrical flexes as they could pose a danger of suffocation or strangulation.
- Never use in a vehicle as a child restraint.
- Never pick the reclined cradle up when the child is in it.
- Do not adjust the reclined cradle when the child is in it.
- Store the reclined cradle out of the reach of children when not in use.
- Do not allow other children to play with the reclined cradle.
- Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- Transformers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
- The product shall only be used with the recommended transformers.

Customer Care: www.redkitebaby.co.uk

BS EN 12790 - 1: 2023.

Manufactured by: The Red Kite Baby Co Ltd. 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX, UK.

Authorized Representative Address: Mum n Me. Triq is-Suq, Zejtun, ZTN1420, Malta.

